



Rion Liquid Particle Counter Shipping Instructions

Sensor Preparation:


- Please notify MGN representative of the model and anticipated shipping date, to reserve time slot and coordinate shipping.
- Purge / flush the sensor with UPW (or filtered IPA during freezing conditions).
- With the clean liquid still inside, cap the sensor's inlet and outlet.

Packaging Instructions:

- Wrap the sensor in a plastic sheet/bag, to prevent packing particles from entering the vents.
- If using the transport case with custom foam inserts:
 - Place the wrapped sensor inside the case.
 - Use packing materials to fill any empty spaces to ensure a tight pack.
 - Include a copy of the completed Service Return Form.
 - Close the case and place "Fragile" and/or "Handle with Care" sticker on outside.



- If using shipping boxes:
 - Have at least 3 inches of padding on ALL sides of the sensor. Avoid using loose packing peanuts, content may shift during shipping.
 - Ensure the box is tightly packed.
 - Include a copy of the completed Service Return Form.
 - Seal the box and place "Fragile" and/or "Handle with Care" sticker on outside.

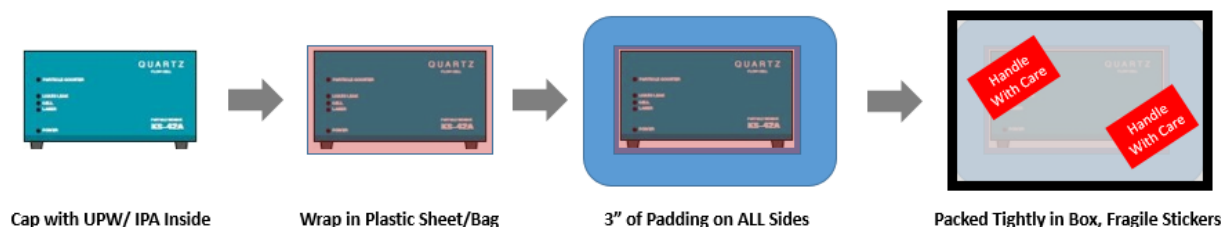

Shipping Address:

MGN Service Dept.
41984 Rio Nedo, Suite 200
Temecula, CA 92590 USA